




HONGQI E-HS9

SUV, 6-seater/7-seater, 5-doors, 2024-

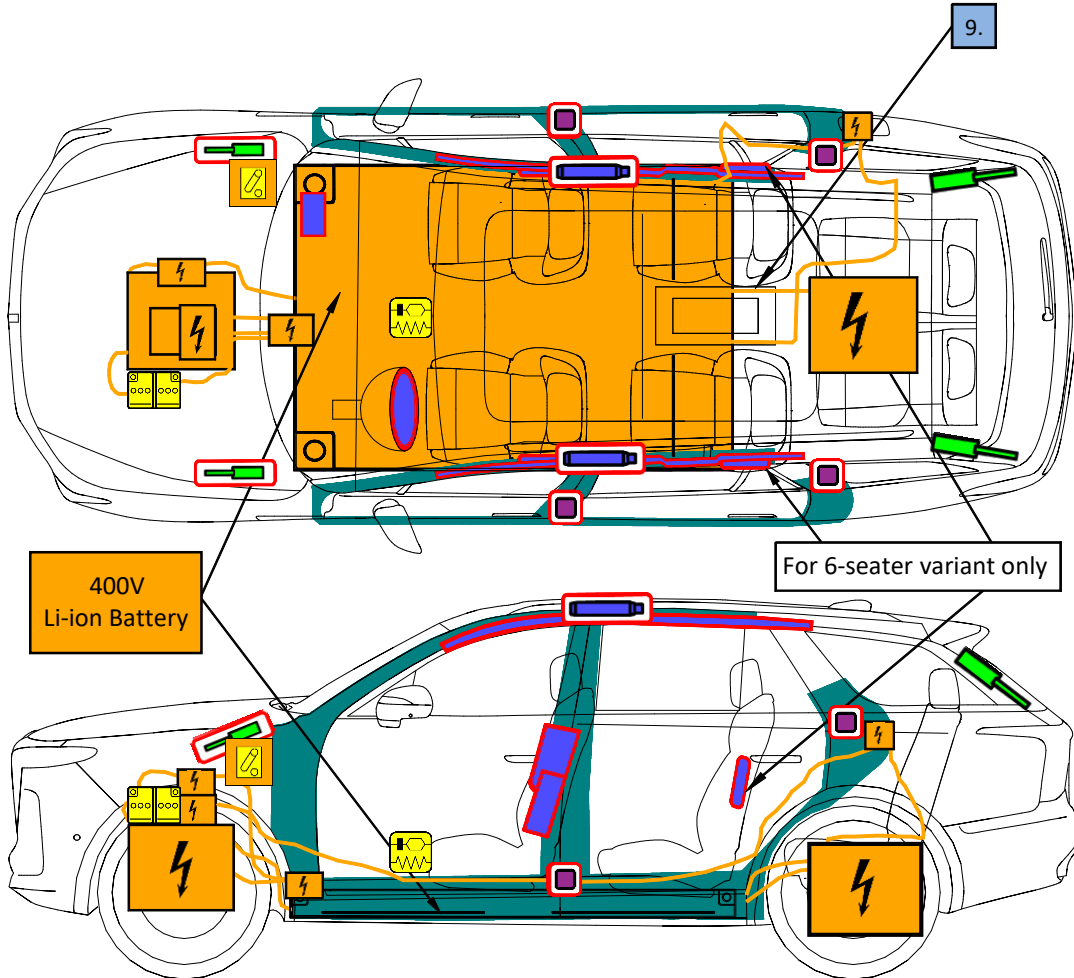

	Airbag		Seat belt pretensioner		High-voltage battery pack
	Preloaded spring/Gas strut		SRS control unit		High voltage component
	High strength zone		Stored gas inflator		Battery low voltage
	disconnect high voltage device		Zone requiring special attention		High voltage power cable/component



HONGQI E-HS9

SUV, 6-seater/7-seater, 5-doors, 2024-




1. Identification / recognition

! The electric motor is silent. The OK indicator light on the instrument cluster indicates that the current electric drive system is operational. Wear appropriate personal protective equipment.




2. Immobilisation / stabilisation / lifting


Immobilise the vehicle

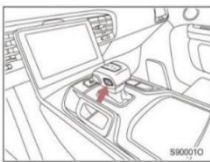

Shift into "P"

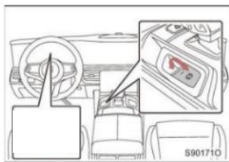

Engage EPB

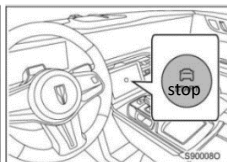


Turn off the ignition



Parking wedge





Stabilisation-lifting points

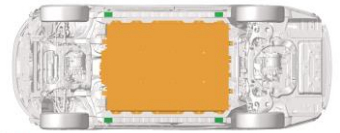


Stabilisation-lifting points
High-voltage battery

3. Disable direct hazards / safety regulations



Main disabling method

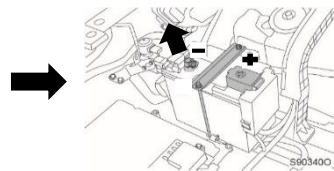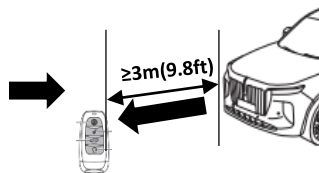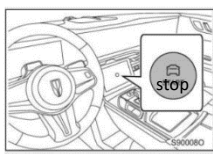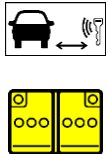

Alternative disabling method

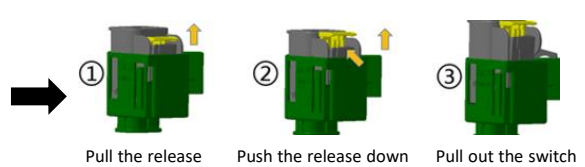

Access to 12V battery

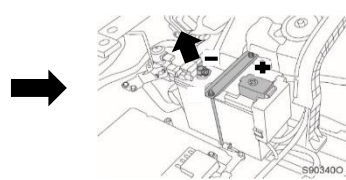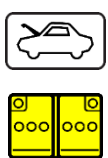

Do not touch , or open high-voltage components and the high-voltage battery!
Wear appropriate personal protective equipment!

In the event of an accident in which the airbags are deployed , the high-voltages system will be automatically deactivated.

Document Name:

Rescue Sheet_HONGQI_E-HS9_001_EN

Version No.

01

Version Date

03/2024

Page

2/4



HONGQI E-HS9

SUV, 6-seater/7-seater, 5-doors, 2024-



4. Access to the occupants

Glass types




High strength zone




Steering column adjustment




Door opening

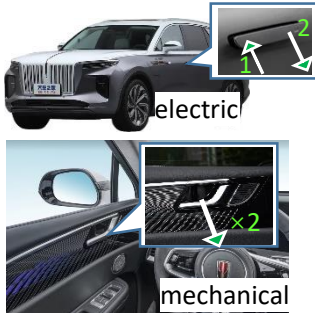


Seat adjustment

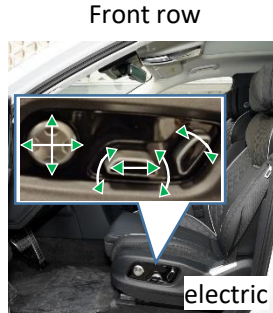

6-seater 2nd row

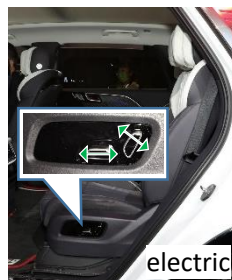

7-seater 2nd row

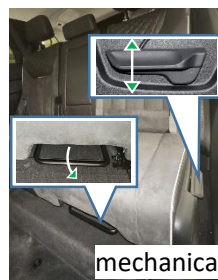

3rd row



If the low-voltage battery is powered off, various electrical adjustments in the vehicle will not be properly operated, such as seat electric adjustment, steering column electric adjustment, and exterior door handle. The 3rd row seat adjustment switch is located on the left trim plate of the trunk.

5. Stored energy / liquids / gases / solids

		12V
		400V
		R1234yf 1120±25g



When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera.



6. In case of fire



Extinguish the fire using large amounts of water.



BATTERY RE-IGNITION!

Document Name:

Rescue Sheet_HONGQI_E-HS9_001_EN

Version No.

01

Version Date

03/2024

Page

3/4



HONGQI E-HS9

SUV, 6-seater/7-seater, 5-doors, 2024-





7. In case of submersion

After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.

8. Towing / transportation / storage

Hook Front

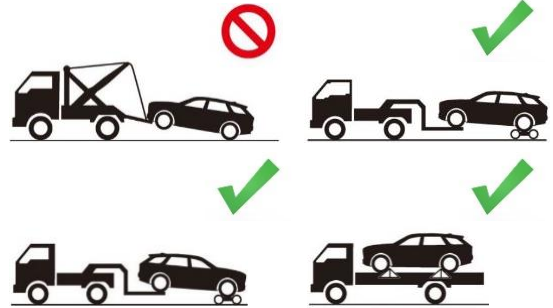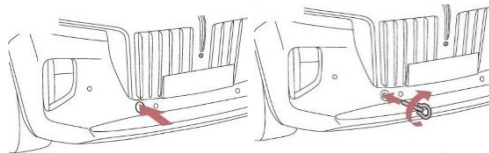

Store at a safe distance from other vehicles!



BATTERY RE-IGNITION!

9. Important additional information



The 2nd row of 7-seater variant is a bench seat with 3 seating positions as the picture shows. The location is marked **9** in Page 1

For more information related to rescue, please refer to https://www.hongqi-auto.com/pages/cartype/cartype_E-hs9.html

10. Explanation of pictograms used

	General warning sign		Explosive		Warning; low temperature
	Remove smart key		Corrosives		Use water to extinguish the fire
	Bonnet		Acute toxicity		Use thermal Infrared camera
	Boot		Hazardous to the human health		Electric Vehicle
	Flammable		Air-conditioning component		